


1 Unpacking

What's in the box

- GTP-870HD
- Remote control
- 1.5V AAA batteries (4)
- Audio/video cable
- FM antenna
- FM antenna adapter
- AM loop antenna
- Power cord
- Warranty card & statement
- User's guide CD





3 Remote Control Overview

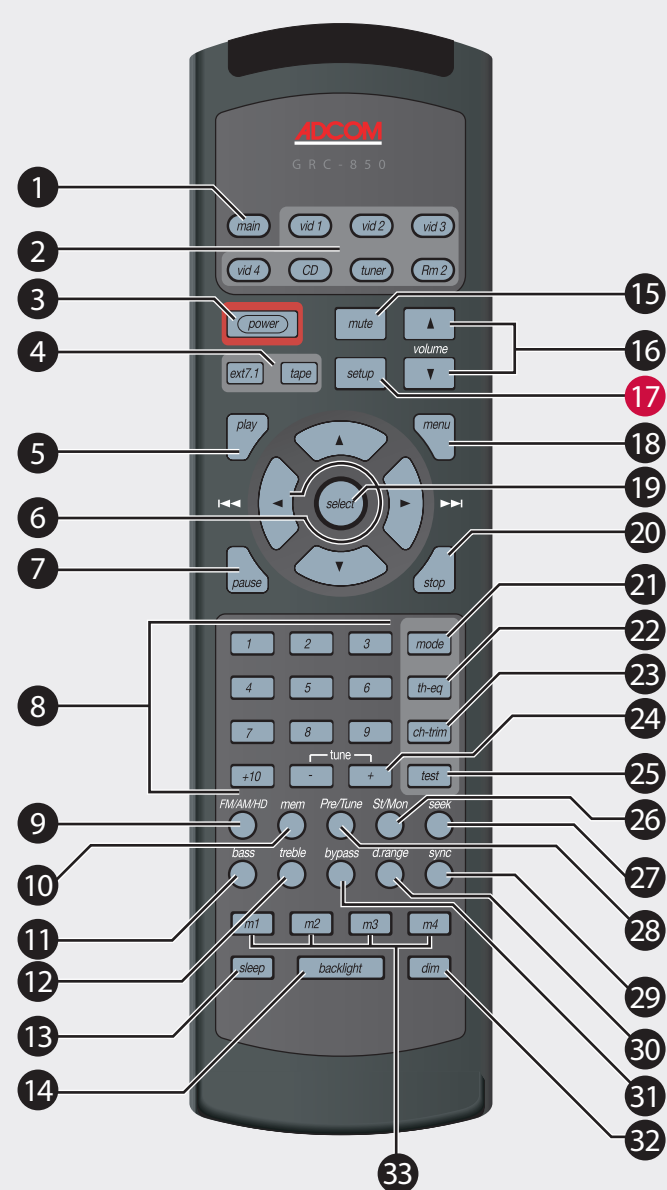

- | | |
|------------------------|-----------------------|
| 1 Main | 18 Menu |
| 2 Source Selectors | 19 Select / HD Format |
| 3 Power | 20 Stop |
| 4 Input Selectors | 21 Mode Select |
| 5 Play | 22 TH-EQ |
| 6 Arrows | 23 CH-TRIM |
| 7 Pause | 24 Tuning Up/Down |
| 8 Direct Access Keypad | 25 Test |
| 9 FM/AM/HD | 26 Stereo/Mono |
| 10 Memory | 27 Seek |
| 11 Bass/Programmable | 28 Preset/Tune |
| 12 Treble/Programmable | 29 Lip Sync |
| 13 Sleep | 30 Dynamic Range |
| 14 Backlight | 31 Bypass |
| 15 Mute | 32 Dim |
| 16 Volume Up/Down | 33 Macro 1-4 |

17 Setup
(See Step 4 for instructions on overriding a Setup Lock)

2 Basic Connections

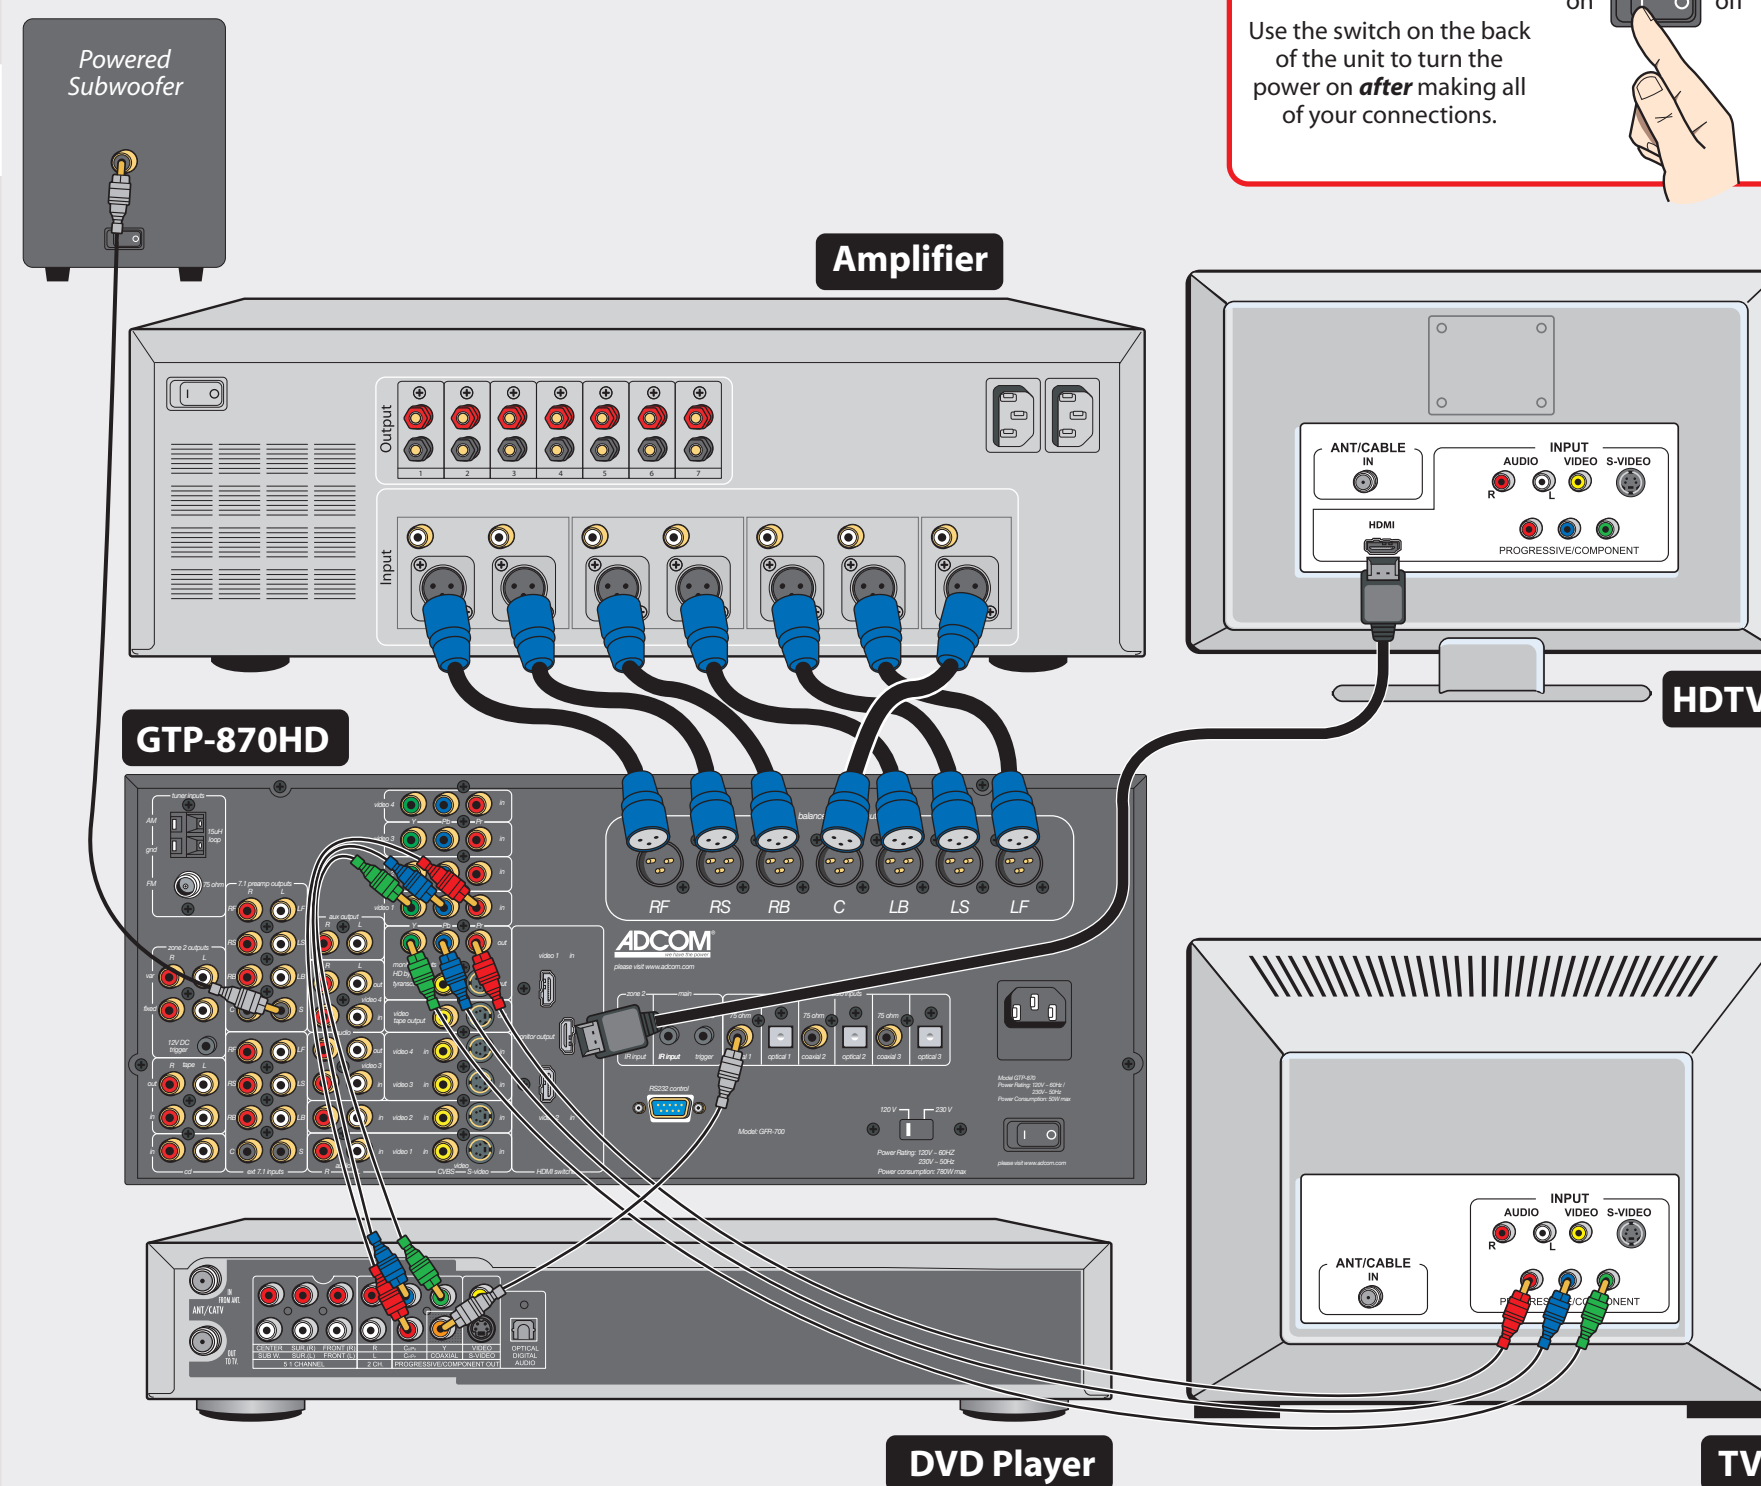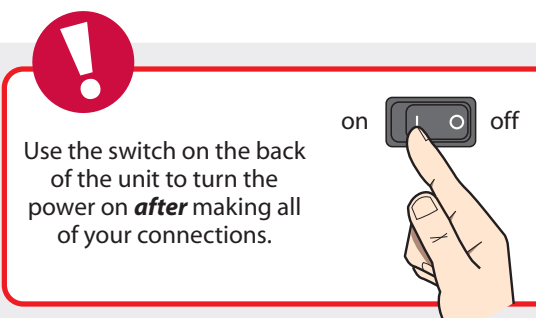

4 Setup Menus

Setup Navigation

- Use the following remote control buttons to navigate the Setup menu.
- **Main** - Press the Main button to select the GTP-870HD. You must first select the GTP-870HD before you can access the Setup menu.
 - **Setup** - Press the Setup button to display and exit the Setup menu.
 - **Arrows** - Press the Δ/∇ buttons to move the selection arrow up or down the list of menu items. Press the \leftarrow/\rightarrow buttons to step through all available options for the selected menu item.
 - **Select** - Press the Select button to confirm your menu selections.

